


# SUSPENSION KIT INSTALLATION

Suspension kits (sold separately) should only be used for ceiling installations, and if there is no suspended ceiling.

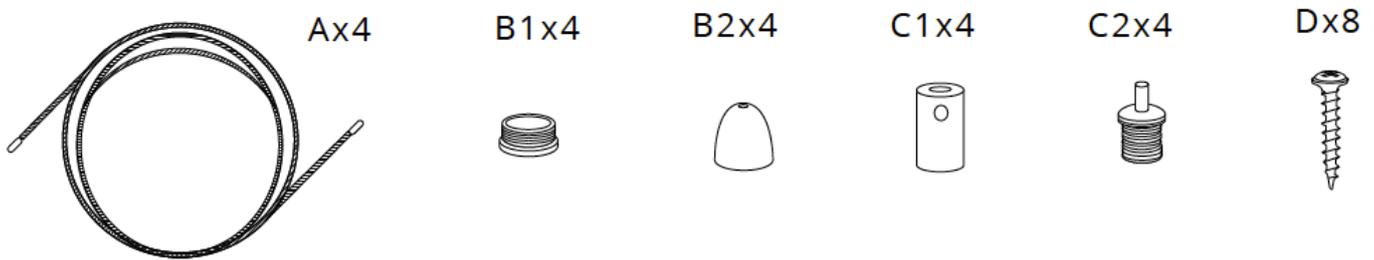

- 4 x Suspension Cable (A)
- 4 x Short Latch Base (B1)
- 4 x Short Latch Bullet Head (B2)
- 4 x Long Latch Lock (C1)
- 4 x Long Latch Cylinder Base (C2)
- 8 x Screw (D)

1. Using (D), screw the base of the Short Latch (B1) into your ceiling.
2. Feed the Suspension Cable (A) through the Short Latch Bullet Head (B2).
3. Screw the Bullet Head (B2) into the Short Latch base (B1).
4. Remove one of the screws from the back of the frame, and use the screw supplied with the Suspension Kit (D) to screw in the Long Latch Cylinder Base (C2) to the back of the frame.
5. Feed the Suspension Cable (A) through the small opening at the top of the Long Latch Lock (C1), pressing down on the opening to open the lock. Releasing the opening will lock the cable in place.
6. Feed the remaining Suspension Cable (A) through the top of the Long Latch Cylinder Base, and out through the small hole in its side. You can adjust the length of the cable by pressing down on the Long Latch Lock (C1) and feeding the suspension Cable (A) through. Letting go of the Long Latch Lock will hold the cable in position.
7. Once you have the Suspension Cable (A) set to the correct length, add another 5mm to the length, and use a pair of scissors to cut the Suspension Cable so that there is no excess wire protruding from the Long Latch Cylinder Base (C2).
8. Screw the Long Latch Lock (C1) into the Long Latch Cylinder Base (C2) to fix it into position.
9. Repeat steps 1 to 8 for the remaining Suspension Cables.

